

Guia para Senhas de 2º Nível & Parâmetros Avançados dos Inversores

Sumário

01

Site do Registration / senhas de 2° nível / download de firmware 02

Parâmetros Avançados nos Inversores.



01 Site Registration



Site Registration Acesso as ferramentas avançadas

 Acessos para download das versões recentes de firmwares dos inversores

 Acesso gratuito para download dos programas Aurora Manager Lite



 Confecção de senhas de segundo nível para alteração de parâmetros AC

 Histórico das senhas geradas, mantendo um maior controle para o integrador.





Primeiro acesso no site do Registration e criação de login



Site Registration 1° passo para acessar a ferramenta do Resgistration

Link : <u>https://registration.solar.fimer.com/</u>

Observação : Usar o site em inglês e sem o tradutor ativo, em breve terá a opção língua em português





Site Registration Fazendo o primeiro registro, "Clicar em Sign Up!"

registration.solar.fimer.com						
ELLARD.		Search: Co	rporate	~		GO
FIMER	I FI	IMER Home	About FIMER	Support	Investor Relations	Why FIMER
	Welcome to the registration page				Language: E	ng <mark>lish</mark> ∨
	Welcome to the registration page.					
will also allow you to enter the configuration SW of inverte From "installer" interface you can modify the internal parar password and the data used for the registration. You will h Entering the reserved area also allows you to have a pass protections, change the protections operation threshold). To receive the password you have to enter the S/N (serial are available on the inverter display (INFORMATION men The entering password for the service menu has a time lin	The set of inverters in accordance with the law in formates of inverters in accordance with the law in formate to reenter the password and your registration disword to access the service menu of inverter display number), the WK (production week) and the Update $u \rightarrow S/N$ and INFORMATION -> Firmware) and, on nit; it does not last longer than 14 days from its calc	rce. To log in a data only in cas ay in order to ea te version for v n the inverter la culation.	as "installer" you se of SW versio asily adjust the which you need abel and inverte	I have to e on updating settings (a the passw r shipping	enter your advanced g. activation/deactivation vord. Necessary infor box.	access n of rmation
Not registered? Go to the registration page, enter your details and you will receive an email with the password to access to all services.	Enter your parameters to access to the services reserved for you Username: Password:	s H E y	Have you forgot Enter your detail Your password	en your pa	assword? will send you an ema	ail with



7

Site Registration Prenchendo as informações pessoais

FINAED		Se	arch: Co	rporate	~		GO
FIIVIER		FIME	ER Home	About FIMER	Support	Investor Relations	Why FIMER?
	Enter your registra	tion information				Language: (Eng	llish 🗸
E-mail do integrador E-Mail:	ronni.moraes@fimer.com	Privat	te / Trade:	Individual per	rson 🗸		
т	he Email will also be your username for access to the site once registration is completed	<u>Tipo de</u>	<u>conta</u>				
Primeiro Nome First name:	Ronni						
Sobrenome Surname:	Moraes						
Data de nascimento Date of birth:	11-25-1969						
País Country:	Brasil	<u>CEP</u>	Zip Code:	18087-125			
address:	Rodovia Senador José Ermírio de Moraes, 548	<u>Celular</u>	Phone:	15 3023-779	5		

Send a notification when new configuration SW version are released

Envio de notificação por e-mail toda vez que um senha de nível 2 for criada com seu usuário



Site Registration Ler e aceitar os termos de utilização





9

Site Registration Confirmar se as informações estão corretas e aceitar

FIMED		Search. Co	orporate	~		10	GO
FINER		FIMER Home	About FIMER	Support	Investor Relations	Why F	IMEF
Conditions for use of t	the website and passwords for advanced access to the configuration instru-	ments of Power	r-One inverters	κ.			
 Applicable law and ju password to access the application of the law in on behalf of others. 	risdiction. The use of the Power-One website, including access to information on software to change the data is an implicit acceptance by the user to subject them this jurisdiction, regardless of the fact that access to the aforementioned informat	Power-One prod nselves to the so tion or structures	lucts, in particul le and exclusive coccurs in the in	ar to the in e jurisdictio hterests of	verter and to the n of Italy and to the the user themselves o	ar no	
At the absolute and ex	Check the entered data				the country in		
which the violation occ obliging the other user	Before making actually recording, check that the da E-Mail: ronni.moraes@fimer.com	ata entered is c	orrect		of them,	-	
☑ I agree	First name: Ronni Surname: Moraes Private / Trade: Individual person Date of birth: TueTue-NovNov-1969196919691969 Country: Brasil				the pdf docum	nent	
Statement on proces • to the processin surveys.	address: Rodovia Senador José Ermírio de Moraes, 548 Zip Code: 18087-125 Phone: 15 3023-7795				Contraction	10 A	
Data controller The data controller is the Article 7 of the Personal Power-One Italy S.p.A.	I want to change the data		Confirm the d	ata enter	ed led for under		
Via S. Giorgio 642 52028 Terranuova Braccio Attn. Personal Data Proce	olini (Ar) ssing Manager						
🗹 I agree				Do	wnload the pdf docum	nent	
Cancel					Sign Up!		



Site Registration Você irá receber um e-mail para confirmação

File Message	Help PDF-XChange	Q Tell r	ne what you want to do									
ि ∭ — ∾ ^{Delete} Archive	Reply Reply Forward to v	Protect	 ☑ Respondidos - r → To Manager ☑ Team Email ✓ Done ☆ Reply & Delete 	Mov] 🗗 🔪 e 💽 ~ 🛛 As Po	→ Mark Unread → Categorize → ssign licy → P Follow Up →	Translate →	A)) Read Aloud	Q Zoom	View	Send to OneNote	Insights
Delete	Respond	Protection	Quick Steps		love	Tags 🛛	Editing	Speech	Zoom	Salesforce	OneNote	
Registration o	on site Power-One											
)fimer.com(noreply@fimer	com via p	ower-one.com)					← Re	ply 🤇	6 Reply All	-> Forv	vard •••
To O Roni	ni Moraes	com na p									ter 03	/11/2020 19:5:
Retention Policy Junk	Email (30 days)				Expires 03/1	2/2020						
We could not verify	the identity of the sender. Click h	er apply a difference to learn m	ore.									
The actual sender o	f this message is different than the	normal send	ler, Click here to learn more.									
Dear custome	er,											
thanks for the	e request for registration to the	website Po	ower-One.									
To complete	the registration process, follov	the link be	low									
			<u>C(</u>	omplete the tra	nsaction							
							A	BB Produ	ct Group	o Solar sup	port team	
									0			
			Clicar no link	nara val	idar soi	LUSUÁRIO						

Site Registration Depois você irá receber um outro e-mail com a senha

Registration confirmation to Power-One						
noreply@fimer.com(noreply@fimer.com via power-one.com)				Keply All	→ Forward	
To O Ronni Moraes					ter 03/11/20	20 19:5
etention Policy Junk Email (30 days)		Expires 03/12/2020				
Links and other functionality have been disabled in this message. To turn on that functional This message was marked as spam using a junk filter other than the Outlook Junk Email filte We could not verify the identity of the sender. Click here to learn more. The actual sender of this message is different than the normal sender. Click here to learn mo	lity, move this message to the Inbox. rr. ore.					
Dear Customer, You successfully completed the registration to the Power-one's website. The We recommend you archive this e-mail and save its content in order to retrie The following are your access credentials:	e following password will allow yo eve your password at any time!	ou the access our reserved area.				
Username: Use the e-mail address given during the registration step Password: 3v5Hc0	Fazer o login	<u>com seu e-mail e e</u>	<u>ssa senha, guarc</u>	<u>le essa s</u>	enha.	
This password, alongside the information inserted (e-mail address, Name, S configuration SW Aurora Manager. You will then be able to perform advance display. The access code calculation requires the inverter SN entry and has	urname, date of birth) will allow y ed configuration settings on your a temporary duration of 14 days	you to access the reserved area with Power-One inverters and get an acc from the requested date.	an "Installer" profile and downlo cess code to the service menu a	ad our monitoring tainable by the ir	g and nverter's	
Cherc Here to see our supply contrained.			ABB Product G	roup Solar supp	oort team	



Site Registration Fazendo o primeiro login

		Search: C	Corporate	~	
TIVIER		FIMER Home	About FIMER	Support	Investor Relations Why F
					Language: English
	Welcome to the registration page	!			
will also allow you to enter the configuration SW of inverter From "installer" interface you can modify the internal parar password and the data used for the registration. You will he Entering the reserved area also allows you to have a pass protections, change the protections operation threshold). To receive the password you have to enter the S/N (serial	and reserved area where you can download the s as "Installer". heters of inverters in accordance with the law in f ave to reenter the password and your registration word to access the service menu of inverter displ	advanced Cor orce. To log in data only in d ay in order to	as "installer" you as of SW version easily adjust the	u have to ei on updating settings (ad	r w updating. This password nter your advanced access g. ctivation/deactivation of
are available on the inverter display (INFORMATION ment The entering password for the service menu has a time lim	humber), the WK (production week) and the Upd i → S/N and INFORMATION -> Firmware) and, o it, it does not last longer than 14 days from its ca	ate version foi on the inverter Ilculation.	which you need label and inverte	the passwo r shipping l	ord. Necessary information box.



Digitar o e-mail cadastrado e a senha recebida.



Funcionalidades do site do Registration

- Histórico de senhas geradas
- Criação da senha de 2º nível
- Download de firmware & programas
- Informações e mudança de dados pessoais



Site Registration Funcionalidades do site do Registration



- 1 Históricos de Senha de 2º Nível
- 2 Gerar senha de 2º nível
- 3 Área de acesso dos firmware e softwares disponível para download.
- 4 Informações e dados pessoais
- 5 Sair da área de acesso do site



Site Registration Histórico de senhas geradas

			Searc	h: Corporate	~	GO
			FIMER	Home About FI	MER Suppor	t Investor Relations Why FIMER
		1925 C.S.				Language: English 🗸
Requests history Re	quest passw	vord Inverter Do	vnload User options			Logout
In this page is possib	le to consu	It the history of I	equests made			
N	Aail			Scaric	a il file dello st	torico
Date	Time	Type of operation	Note			
Tue, October 28,2020	10:14AM	Request passwor inverter	Inverter:PVS-100/120-TL - S/N:121261 - WK:40	19 - PSW:744441	I- EXP:2020-11	I-11
	09:30AM	Request passwor inverter	Inverter: PVS-100/120-TL - S/N: 121261 - WK: 39	19 - <mark>P</mark> SW:619750)- EXP:2020-11	-11
Mon, October 27,2020	05:10PM	Request passwor inverter	Inverter:PVS-100/120-TL - S/N:140695 - WK:39	18 - PSW:632494	I- EXP:2020-11	1-10
	03:27PM	Request passwor inverter	Inverter:PVI-12.5-TL-OUTD - S/N:100646 - WK:	4918 - PSW:7176	631- EXP:2020	-11-10
	09:47AM	Request passwor inverter	Inverter:PVS-100/120-TL - S/N:113917 - WK:47	18 - <mark>PSW:70</mark> 8212	2- EXP:2020-11	-10
Sun, October 26,2020	01:05PM	Request passwor inverter	Inverter: PVS-100/120-TL - S/N:121257 - WK:40	19 - PSW:744433	8- EXP:2020-11	1-09
Thu, October 23,2020	02:49PM	Request passwor inverter	Inverter:UNO-DM-6.0-PLUS - S/N:112659 - WK:	3418 - PSW:658	494- EXP:2020)-11-06



Criação da senha de 2º nível 1º Passo - etiqueta do inversor / monofásico





Criação da senha de 2º nível 1º Passo - etiqueta do inversor / trifásico





Criação da senha de 2º nível 1º Passo - etiqueta do inversor / trifásico





Criação da senha de 2º nível 1º Passo - etiqueta do inversor / trifásico



Nomenclaturas

- Power module or wiring box model
- Power module or wiring box Part Number
- Power module/wiring box Serial Number
- YY = Year of manufacture
- WW = Week of manufacture
- SSSSSS = sequential number
- Week/Year of manufacture



Criação da senha de 2º nível Fotos das etiquetas do inversores linha UNO





Criação da senha de 2º nível Foto das etiquetas do inversores linha PVI





Criação da senha de 2º nível Foto da etiqueta do power module linha TRIO-20/27.6





Criação da senha de 2º nível Foto da etiqueta do power module linha TRIO-50/60





Criação da senha de 2º nível Foto da etiqueta do power module linha PVS-50/60





Criação da senha de 2º nível Foto da etiqueta do power module linha PVS-100/120





Criação da senha de 2º nível Foto da etiqueta do power module linha PVS-175





Criação da senha de 2º nível Inserindo os dados da etiqueta



In order to request the service password you have to insert the model of the inverter (which can be selected in the pull-down list), the S/N (serial number), the WK/YR (week/year of production of the inverter) and the Update Ver.. This information is available on the display of the inverter: S/N and WK/YR in the menu "INFORMATION – Serial Number"; the Update Ver. in the menu "INFORMATION – Firmware – Update Ver."

The S/N of the inverter must be composed by 6 digits; WK (week/year of production) must be inserted in the WKYR format, without the interposition of any digit, Update Ver. must be composed by 5 digits, as it appears in the display of the inverter.

About the value to insert in the Update Ver. field, the following rules must be observed:

1. In case on the display the information Update Ver. is not present or it is "NONE", leave the field blank.

2. In case on the display the information Update Ver. is composed only of numbers:

- if the year of production is 12 (2012) or lower, the information is mandatory for the password calculation and the field must be filled with the information as shown on the display.

- if the year of production is 13 (2013) or higher, the information is not mandatory and the field can be left blank.

3. In case on the display the information Update Ver. includes a letter:

- if the year of production is 12 (2012) or lower, leave the field blank taking care to insert as week/year of production 0113.

- if the year of production is 13 (2013) or higher, leave the field blank taking care to insert week/year as shown on the inverter display.

		ři .		Week / year	
	Inverter model:	Update Ver.:	S/N Inverter:	of production:	Note
100	PVS-100/120-TL V		123456	1920	
	PVI-2000(-OUTD)-XX V				
	PVI-2000(-OUTD)-XX V				
	PVI-2000(-OUTD)-XX V				
	PVI-2000(-OUTD)-XX V				
					Add other 10 rows



Criação da senha de 2º nível Finalizando com o número da senha

vear of production is 13	spiay. (2013) or higher, the i	nformation	is not ma	andatory and the	e field can be let	t blank	Support	investor relations	AND THE R
ase on the display the in	formation Update Ver.	includes a	letter:						
e year of production is 12 e year of production is 13	(2012) or lower, leave (2013) or higher, leave	e the field b	ank takir Iank taki	ing care to insert	as week/year o t week/year as s	shown on the i	nverter d	isplay.	
Inverter	nodel:	Update Ver.:	S/N Inverter:	Week / year of production:		Note			
PVS-100/12			rea	quest_done					
PVI-2000(-0			Le pas	sword richieste:					
PVI-2000(-0	Inverter model:	S/N Inverte	er: Week	/ year of produ	ction: Password	Expire date			
PVI-2000(-C	PVS-100/120-TL	123456		1920	476987	2020-11-18			
PVI-2000(-0 PVI-2000(-0		Ricordiamo	o che sara	anno valide a tutt	o il 11-18-20				
PVI-2000(-O		Click on th	ne window	v to close or wait	30 seconds				
PVI-2000(-0			txt	serialesent					
PVI-2000(-0									
PVI-2000(-OUTD)-XX	~]	
55				ili ili			Ad	d other 10 rows	



Download de firmware & programas Mostrando onde realizar os downloads

	Search: Corporate	~	GO
TIMER	FIMER Home About FIMER	Support Investor Re	lations Why FIMER?
Requests history Request password Inverter Download User options		Languag	Logout
→ Aurora Manager 5_0_7_0 32 bit - LITE.zip Update on: TueTue-FebFeb-2020202020202020 Software for FW updating for inverter UNO, TRIO, PVI-10.0/12.5-TL and 55kW/67kW modu	les and advanced configuration for inverter Uf	NO, TRIO, PVI-10.0/12.5	-TL
→ PVS-120-TL[2011C + 1.0.10].zip Update on: WedWed-SepSep-20202020202020 PVS-120-TL: versione FW - Inverter: 2011C; WLAN: 1.0.10			
→ PVS-50-TL (SN inferiore a 1935130978) [1902B + 1.8.9].zip Update on: ThuThu-SepSep-2020202020202020 PVS-50-TL: FW version suitable for inverters having S/N lower than 1935130978 - Inverter	: 1902B; WLAN: 1.8.9		



Informações e mudança de dados pessoais Informações do usuário

ГІМГП					Search: C	orporate	*		GO
FINIER					FIMER Home	About FIMER	Support	Investor Relations	Why FIMER?
								Language: En	glish 🗸
Requests history	Request password Inverter	Download User	options					L	ogout
This is the user o	ptions section								
	Default language: English			•					
	Send a notification when	new configuration	SW version are re	leased					
			2						
			Save opt	ions	J.				
→ Download	the document on the co	ndition of your	use of the web	site					
→ Download	the document on the pro-	ocessing of per	sonal data						
			Summary of us	ser data					
	First name: I			S	urname: I				
	E-Mail: (Date	of birth:				
	If you want to correct one of reg way you will be able to make a	gistering parameters new registration wit	, press the button b h the correct data.	elow to send	a request for car	ncellation of you	r account.	In this	



02 Parâmetros Avançados nos Inversores



Parâmetros Avançados nos Inversores



Acesso web server do inversor 02

Alteração de parâmetros AC

03

Funções Avançadas 04

Atualização de firmware

05

Reset do inversor para padrões de fábrica





Acesso ao web server do inversor e login adm plus



Acesso ao web server do inversor e login adm plus 1º Passo conectar-se ao web server do inversor



FIMER

Acesso ao web server do inversor e login adm plus Acessar a página de web interface do inversor

Digita o IP no navegador Link : 192.168.117.1

Observação : Também é possível conectar no inversor via IP de internet, entretanto os dois dispositivo (inversor + celular/notebook) devem estar conectados na mesma rede.





Acesso ao web server do inversor e login adm plus Fazer o login no inversor





Acesso ao web server do inversor e login adm plus Acessar o ícone de "User" e clicar em "Admin Plus"



Please inser	't the Token to er	nable the Admin	Plus
Contact ABI	B support to obt	ain it.	
Token			
Enter the	Token consists	of 6 numbers	
Required	ł		
	🔒 Log	In	
IC.			

Essa senha deve ser feita no site do Registration no link abaixo:

Link : https://registration.solar.fimer.com/

Passo a passo para acessar o nível Admin Plus do inversor. 1-Clicar no ícone de "User" 2-Clicar na opção "Admin Plus" 3-Digitar a senha de 2º nível "Token" criada no site do Registration conforme instruções anteriores.



Configuração dos Parâmetros CA do inversor Dica de ouro para fazer a senha no site Registration

	Admin Plus Please insert the Token to enable the Admin Plus Mode: Contact ABB support to obtain it: Token Inter the Token consists of 6 numbers Required Log In	UNO-DM 1.2 AN UNO-DM 1.2-TL-PLUS 1/3336-3P37-3117 9:51 AM Tue Nov 17, 2020 America,/Argentina/Bue (kW) Energy Today (kWh) STANDBY What Sun/Grid		UNO-DM 1.2 UNO-DM-1.2-TL-P 143836-3P37-3117 SN WK	ABB	
*		LAN 169.254.6.2	46			
Tela de	navegação do web server					
Essa senha deve ser fe	ita no site do Registration no l	ink abaixo:				

Dica de Ouro Na parte superior é possível encontrar todas as informações necessárias para confeccionar a senha de 2º nível.

Família do inversor SN : Número de série WK: Semana e ano de fabricação

Exemplo dessa imagem: SN = 143836 WK = 3117



Link : https://registration.solar.fimer.com/



Configuração do<mark>s parâmetros CA do inversor</mark>



Configuração dos Parâmetros AC do inversor Configurando parâmetros CA 1/3

≡	Settings				
A		Dynamic Feed-In Control			
*		Digital Outputs			
۰		Inverter Parameters			
÷					
æ					
ų					
í					
Ж					

erter Parameters	<	AC Settings	<
Search	۹		
AC Output Rating	>	Grid Connection	>
AC Settings	>	Grid Protections - VRT/FRT	>
Active Power Control	>		
DC Settings	>		
Digital Input	>		
Frequency Control: P(f)	>		
Ramp Control	>		

Configurando Parâmetros CA Para configurar os parâmetros CA, por exemplo elevar/diminuir o range tensão CA (V) ou frequência (Hz), seguir :



Em AC Settings terá a opção Grid Connection (Conexão CA). Grid Protections (Proteções de rede).



Configuração dos Parâmetros AC do inversor Configurando parâmetros CA "Grid Protections" 2/3



Na parte de "Grid Protections" recomendamos mexer apenas nos parâmetros : OV1 (Valor máximo de tolerância para tensão AC) UV1 (Valor mínimo de tolerância para tensão AC) Obs: Na maioria das vezes só se mexe no valor OV1, recomendamos um valor máximo até 264V.



Configuração dos Parâmetros AC do inversor Configurando parâmetros CA "Grid Connection" 3/3



Obs: Normalmente essa é a tela que contem os dados que concessionária de energia elétrica quer visualizar no dia da vistoria.

 CheckGrid Time - NO GRID Fault 60 s
 Max FGrid for connection 60.1 Hz
 Max VGrid for connection 220 V
 Min FGrid for connection 59.9 Hz
 Min VGrid for connection 90 V

23 November 2020 43

frequência para conexão.

6-Valor mínimo de tensão

AC para conexão.





Funções Avançadas

- Limitação de conversão de potência
- Controle de frequência P(f)
- Controle de energia reativa



Funções Avançadas "Active Power Control" Limitação de conversão de potência (kW)

Inverter Parameters	<	Active Power Control	<	1	Active Power Curtailment	<
Search	۹				Active Power Curtailment En/Dis ENABLED	-
AC Output Rating	>	Active Power Curtailment	>		P Set Point 50 %Pmax	
AC Settings	>	CEI Average VGrid Derating	>		▲ 1212 W	
Active Power Control	>	Volt/Watt settings: P(V)	>	2	CEI Average VGrid Deratii	<
DC Settings	>			2	Derating Enable/Disable DISABLED	
Digital Input	>				Protection Enable/Disable DISABLED	
Frequency Control: P(f)	>	Controle de potência			Protection Threshold 242 V	
Ramp Control	>	1-Limitação de forma percentual o	de acordo		Essa configuração é um p	ouco io de
Reactive Power Control	>	2-Limitação de potência em funçã tensão	io da		potência é de forma % de com os valores de tensão potência desejados.	acordo e



Funções Avançadas "Frequency Control: P(f)" Controle de frequência P(f)

Search	۹	
AC Output Rating	>	
AC Settings	>	
Active Power Control	>	
DC Settings	>	
Digital Input	>	
Frequency Control: P(f)	>	
Ramp Control	>	
Reactive Power Control	>	

ency control: P(r)	<
Freq. Derating General En / Dis ENABLED	
High Freq. Derating En / Dis ENABLED	
Hysteresis Enable/Disable ENABLED	
Intentional Delay (O.F.) O s	
P max 1212 W	
Restore Frequency Check Time (O.F.) 300 s	
Restore Frequency Lower Limit 59.9 Hz	
Restore Frequency Upper Limit 60.1 Hz	
Restore Ramp Enable/Disable	

Controle de frequência :

Essa <u>função somente é utilizada quando o</u> <u>inversor será utilizado em um sistema</u> <u>híbrido</u> e por isso deverá fazer a interação com outros equipamentos no sistema.

A variáveis de frequência e tempo devem alteradas em comum acordo com os itens a serem utilizados, tendo padrões específicos de acordo com cada fabricante.



Funções Avançadas "Active Power Control" Controle de energia reativa

nverter Parameters	<	Reactive Power Control	<
Search	۹		
AC Output Rating	>	Set Point Response Time	>
AC Settings	>	Cosφ Set	>
Active Power Control	>	Q Set	>
DC Settings	>	Volt/VAr Settings: Q(V)	>
Digital Input	>	Watt/Cosφ Settings: Cosφ(P)	>
Frequency Control: P(f)	>	Controle de energia reativa	
Ramp Control	>	I-Seta o reativo com valor fixo de FP, podendo o range ser -1 até +1.	
Reactive Power Control		2-Seta o reativo com valor percente função de Q.	ual em







Atualização de firmware dos inversores



Funções Avançadas "Firmware Update" Atualização de firmware dos inversores

≡	Serv	ice Tools		Current Firmware Release	Versão atual do Firmware A-Firmware do inversor
\$	Ô	Connectivity Check		INVERTER	B-Firmware da placa de comunicação
		Country Standard		2006A - 1.8.14	
÷		Date/Time			
Ŧ		Reset Manufacturing	_	Remote Local 3	
ب (i)		Special Functions		You can update the inverter picking a valid firmware from the local filesystem. The procedure may take several minutes.	UNO-DM-5.0(4.6)(4.0)(3.3)(3.0)(2.0)(1.2)-TL-PLUS-EU_ver2006A_713-1438.tib VEGA-Q028-v1.8.16-r3012-bf136c02979.ben
				Select FW	1-Clicar no ícone de Ferramentas" Tools"
		Availab		4 Available Release	 2-Clique em "Firmware Updade" 3-Selecione "Local" 4-Selecione o firmware em "Select FW", atualiza so um firmware do cada voz
¢		There a local fil		There are no available updates. Please check remote for a firmware update or upload it from your local file system.	Obs : O download do firmware deve ser feito no site do Registration.

FIMER



Reset do inversor para configurações de fábrica



Funções Avançadas "Firmware Update" Atualização de firmware dos inversores





Reseta apenas o país, ideal quando é feita a escolha de país de forma equivocada.



Connectivity reboot

Reseta as configurações as configurações de rede de internet Wlan e Lan.



Suporte Técnico Fimer



br-solar.service@fimer.com

(15) 3023-7795





Contato via e-mail





Contato via telefone





Muito Obrigado

- Ronni Moraes
- Especialista em monitoramento Aurora Vision